


## SF-2900/SF-2950 Faucets



**SF-2900** Deck mount, Hardwired

**SF-2950** Deck mount, Battery Powered

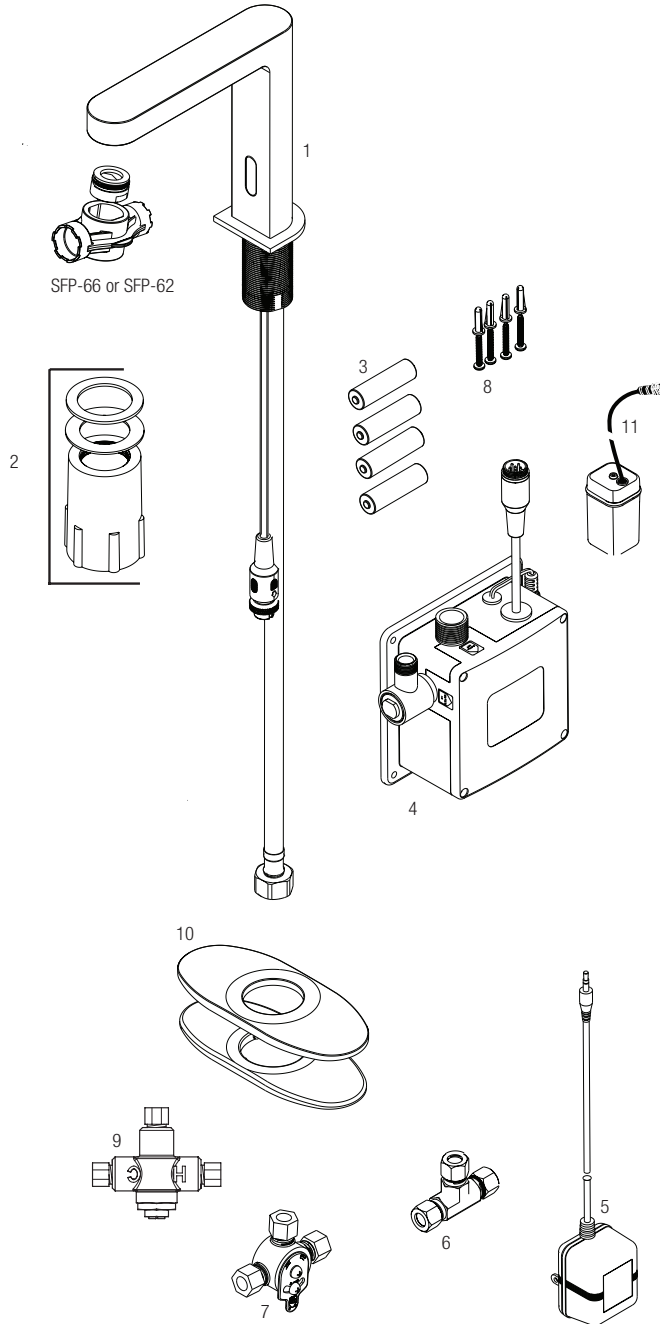

### PARTS LIST—SF-2900/SF-2950

Item No.	Code No.	Part No.	Description
1.	<b>33621021</b>	SFP-63	Faucet Assembly (Models SF-2900/SF-2950)
2.	<b>33620007</b>	SFP-64	Spout Mounting Hardware Kit
3.	_____	_____	Batteries-AA size (4)
4.	<b>0362040</b>	SFP-40-A	Control Module with Adjustable Button (6 pin connector)
5.	<b>0362006</b>	SFP-6	Plug-adapter (120VAC/6VDC)
6.	<b>3365461</b>	ETF-617	Back Check Tee
7.	<b>0326007</b>	MIX-60A	Below Deck Mechanical Mixing Valve
8.	<b>0362005</b>	SFP-5	Control Box Mounting Kit
9.	<b>0326045</b>	MIX-135-A	Below Deck Thermostatic Mixing Valve
10.	<b>03800004</b>	SFP-65	4" Trimplate with Spacer
11..	<b>33590035</b>	EDF-3	Battery Pack

### SPRAYHEAD OPTIONS

—	<b>33620008</b>	SFP-66	0.35 gpm (1.3 Lpm) Spray Head MLM
—	<b>33620009</b>	SFP-62	0.5 gpm (1.9 Lpm) Spray Head MLM

— in Item No. column = Not shown in illustration

NOTE: Some parts and accessories must be ordered separately

— in Code No. and Part No. column = Not sold separately

---

**SF-2900/SF-2950 Faucets**

---

**TROUBLESHOOTING GUIDE**

---

**1. Faucet delivers water in an uncontrolled manner.**

A. Faucet is not working properly. Contact Sloan Technical Support.

**2. Faucet DOES NOT deliver any water when sensor is activated.**

**INDICATOR: Solenoid valve produces an audible “CLICK.”**

A. Water supply stop(s) closed. Open water supply stop(s).

B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

**INDICATOR: Solenoid valve DOES NOT produce an audible “CLICK.”**

A. Batteries low (battery powered models). Replace batteries.

B. Power failure (adapter powered models). Check power supply.

**3. Faucet delivers only a slow flow or dribble when sensor is activated.**

A. Water supply stop(s) are partially closed. Completely open water supply stop(s).

B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

C. Aerator is clogged. Remove, clean, and reinstall aerator. Replace aerator if required.

D. Faucet is not working properly. Contact Sloan Technical Support.

**4. Faucet DOES NOT stop delivering water or continues to drip after user is no longer detected.**

A. Faucet is not working properly. Contact Sloan Technical Support.

**5. The water temperature is too hot or too cold on a faucet connected to hot and cold supply lines.**

A. Supply Stops are not adjusted properly. Adjust supply stops.

**CARE AND CLEANING INSTRUCTIONS**

---

**DO NOT USE** abrasive or chemical cleaners (including chlorine bleach) to clean faucet that may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with clean cloth or towel.

While cleaning the bathroom tile, protect the faucet from any splattering of cleaner. Acids and cleaning fluids will discolor or remove chrome plating.

**When assistance is required, please contact Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).**